




Nikon CoolPix S5 Back Cover Replacement

This guide demonstrates how to install the back cover on the Nikon CoolPix S5 camera.

Written By: Patty Richeson

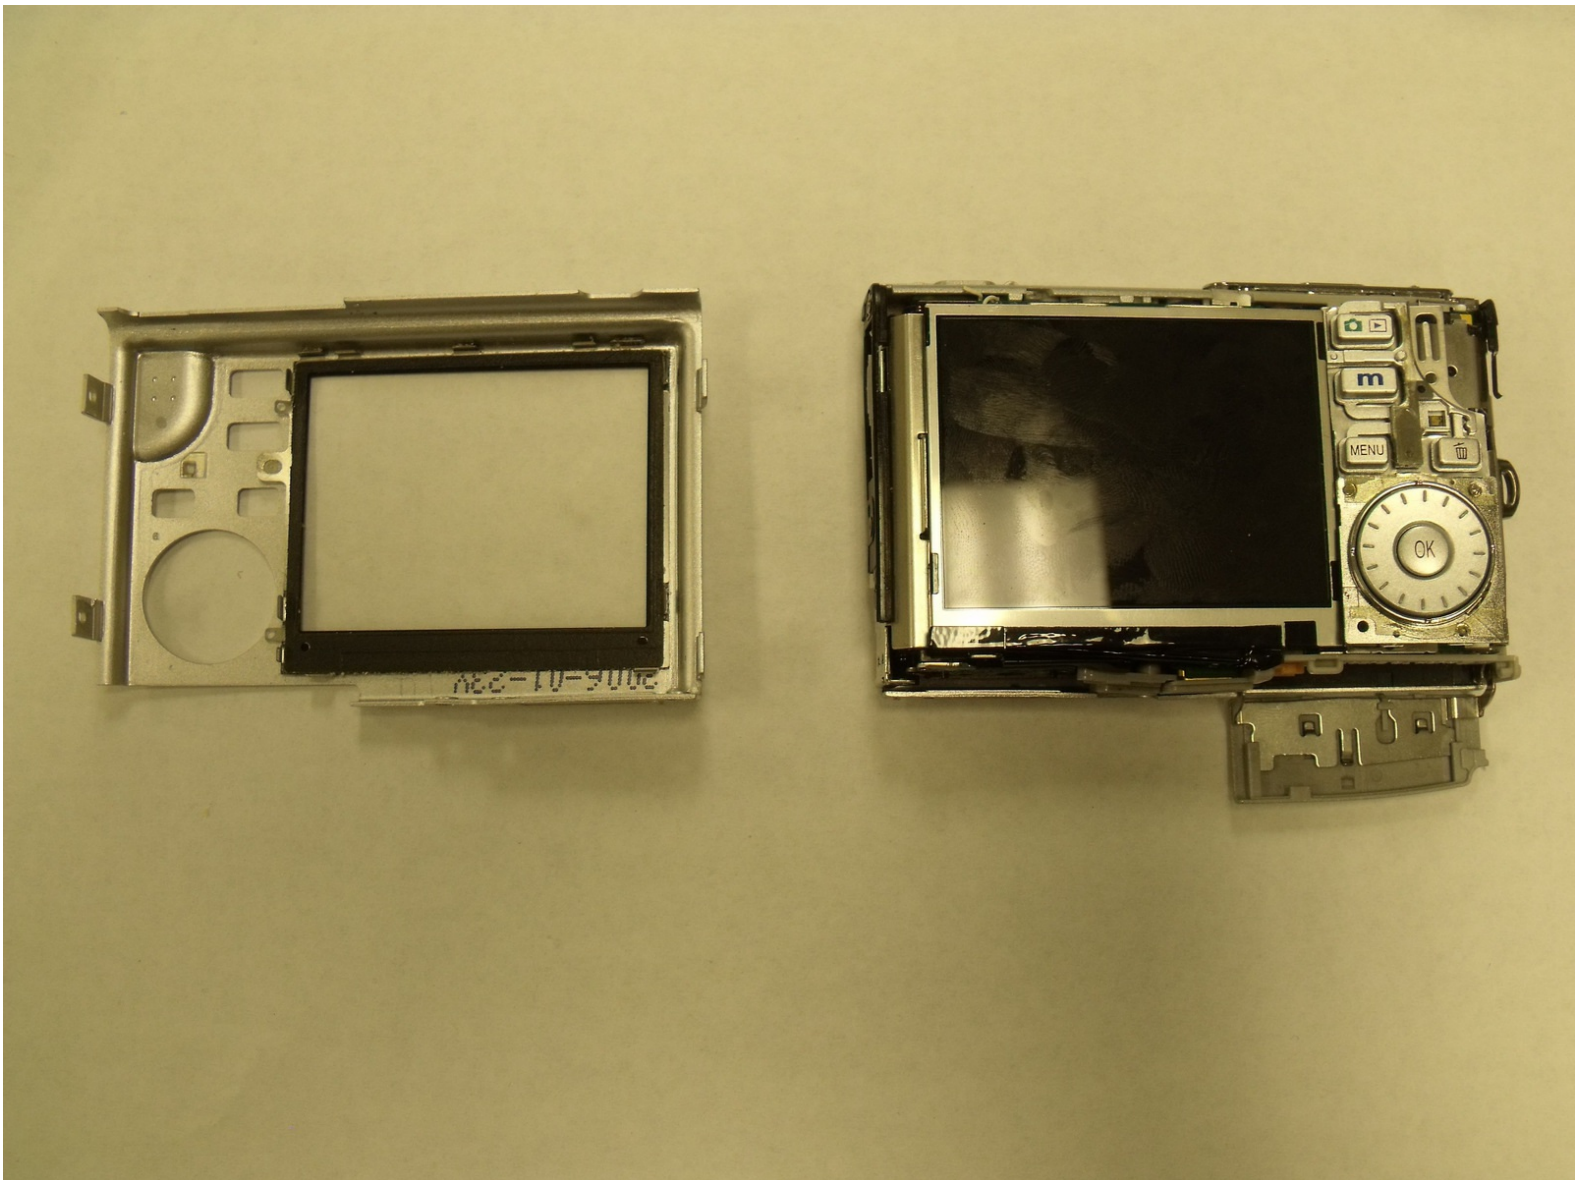

INTRODUCTION


This guide is to be used to install the back cover in the event that it becomes damaged. A Phillips screwdriver will be needed to complete this installation.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover

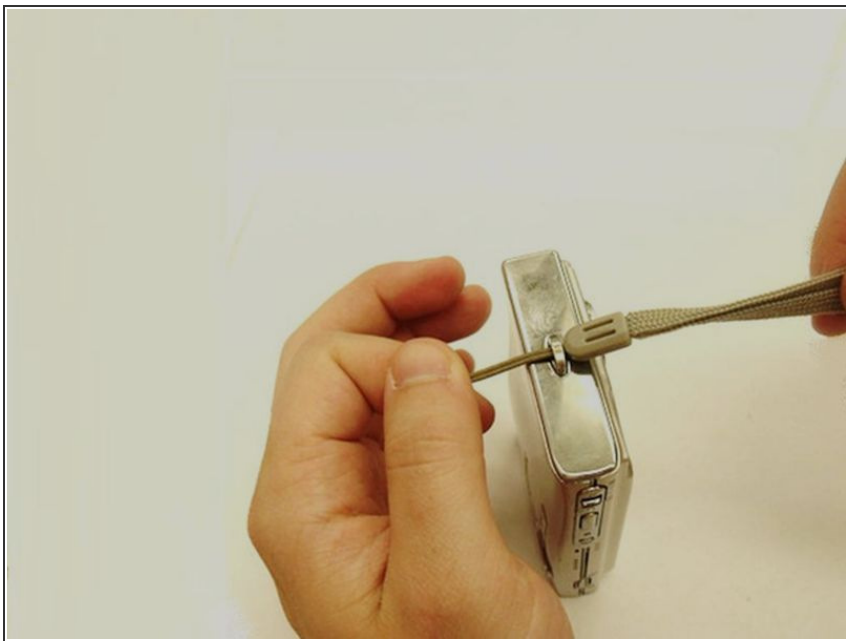


- Remove wrist strap by unknotting the strap.

Step 2

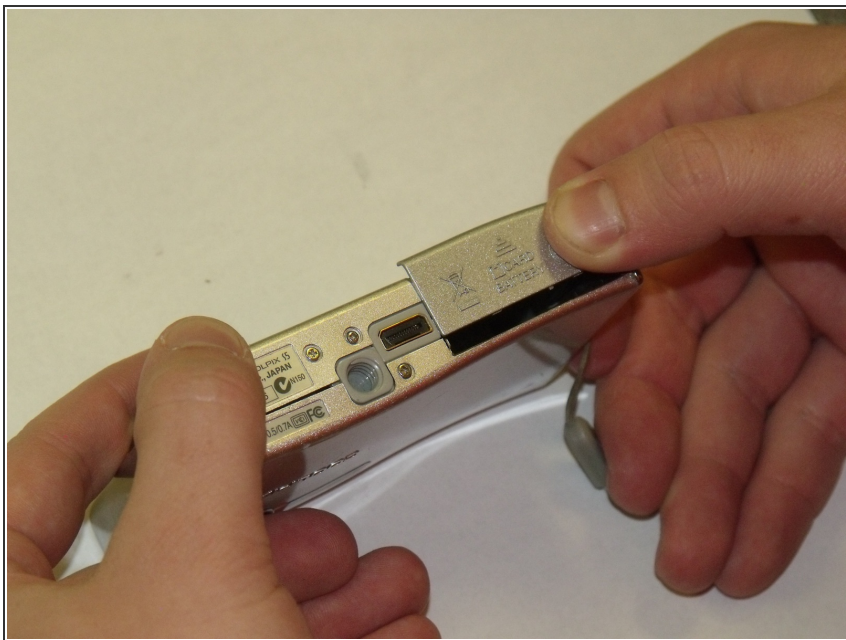


- Open SD/Battery cover.

Step 3

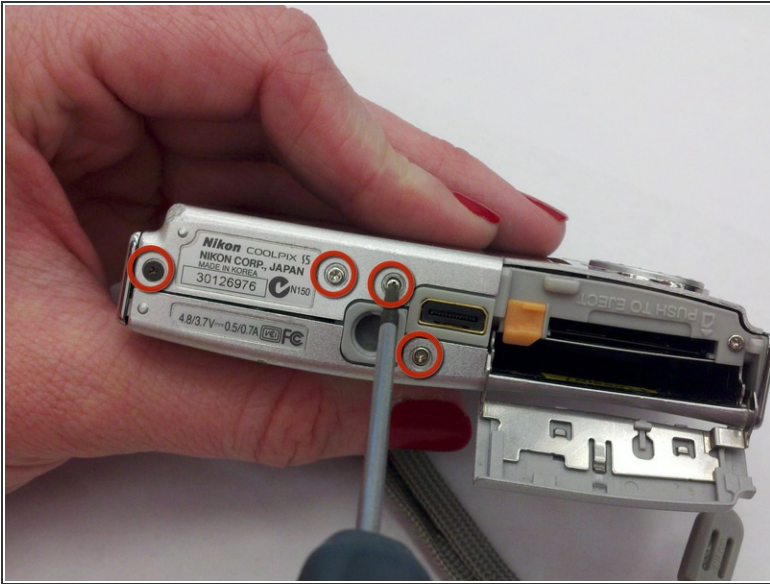

- Use a screwdriver to remove the four screws on the bottom of the camera.

Step 4

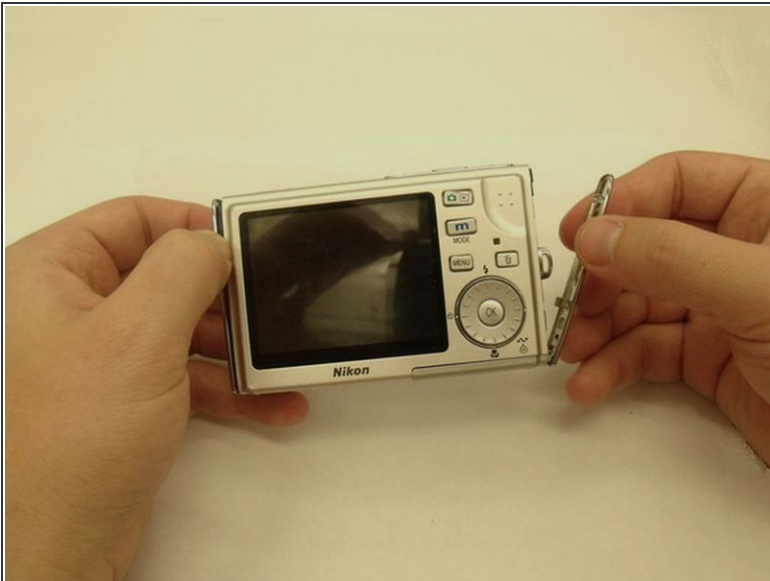



- Pull the silver side panels on each side.

Step 5



- On the right side of the camera (that contains the wrist strap loop), use the screwdriver to remove the two screws holding the backplate in place.
- Repeat this step for the left side.

Step 6

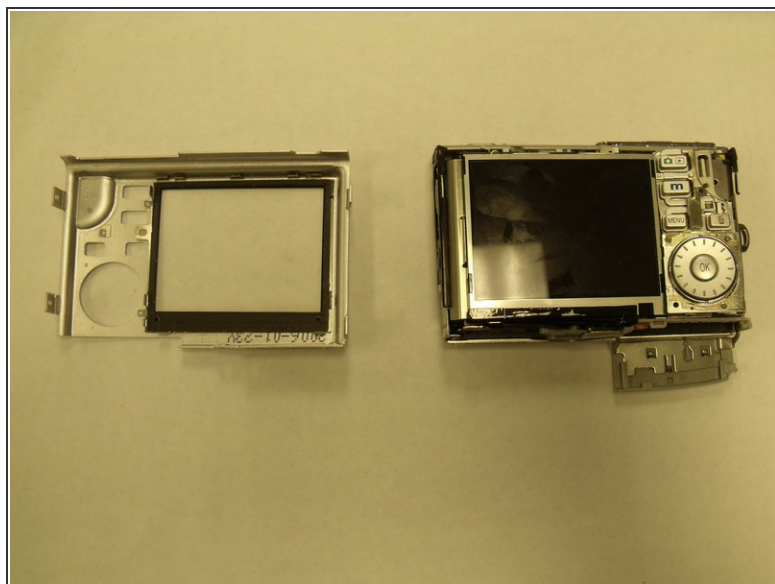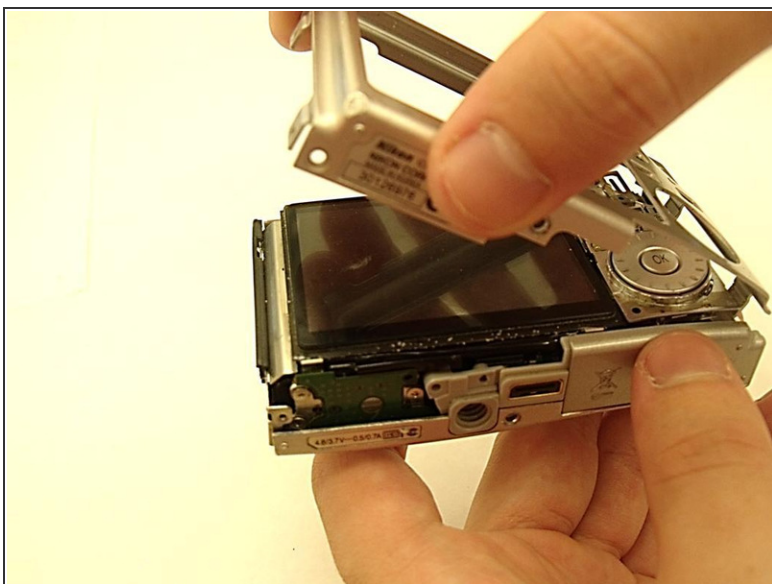

- Pull the back silver faceplate to separate it from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-20 04:18:05 PM.